

UDR195

RATIO DIVERSITY RECEIVER

OPERATING INSTRUCTIONS and trouble-shooting guide

LECTROSONICS, INC.
Rio Rancho, NM

Table of Contents

INTRODUCTION TO THE 195 SYSTEM	4
MODULAR DESIGN	4
T195 TRANSMITTER	5
M195 TRANSMITTER	5
DUAL-BAND COMPANDOR	5
75KHz DEVIATION	5
NO PRE-EMPHASIS/DE-EMPHASIS	5
EXCEPTIONAL THERMAL STABILITY	5
GENERAL TECHNICAL DESCRIPTION	6
MODULAR UHF/VHF RF SECTION	6
SIX-POLE HELICAL RESONATOR FRONT-END	6
GaAs FET FRONT-END FILTER COUPLING	6
DOUBLE BALANCED DIODE MIXERS	6
8 POLE LINEAR PHASE FILTER	6
DIGITAL PULSE COUNTING DETECTOR	7
RATIO COMBINING DIVERSITY WITH OPTI-BLEND	7
2:1 EXPANDER (Dual-Band Compandor)	7
VARIABLE CUTOFF LOW PASS FILTER	7
PILOT TONE MUTE (SQUELCH)	7
FRONT PANEL CONTROLS AND FUNCTIONS	8
AUDIO OUTPUT LEVEL	8
TRANSMITTER AUDIO LEVEL	8
RF LEVEL INDICATORS	8
OPTI-BLEND LEDs	8
PILOT LED	9
DIVERSITY MODE	9
MONITOR	9
POWER	9
REAR PANEL CONTROLS AND FUNCTIONS	10
VU METER HEADROOM	10
AUDIO OUTPUT	10
PHASE REV	10
AC POWER SUPPLIES	10
EXTERNAL POWER JACK	11
CONTACT CLOSURE	11
PILOT TONE BYPASS	11
ANTENNA JACKS	11

ANTENNA USE AND PLACEMENT 12

INSTALLATION AND OPERATING INSTRUCTIONS 13

TROUBLESHOOTING 14

 POWER SUPPLY AND FUSE 14

 PILOT TONE SQUELCH 14

 ANTENNAS AND RF SIGNAL STRENGTH 14

 AUDIO SIGNAL QUALITY 15

 VU METERING AND OUTPUT LEVEL 15

DR195 REPLACEMENT PARTS and ACCESSORIES..... 15

SPECIFICATIONS AND FEATURES 16

SERVICE AND REPAIR 17

RETURNING UNITS FOR REPAIR 17

WARRANTY Back cover

INTRODUCTION TO THE 195 SYSTEM

The DR195 employs the most advanced circuit and mechanical design ever applied to a wireless microphone receiver. Two independent, ultra-high performance receivers are blended in a highly effective ratio diversity design. The audio processing is the finest quality system ever developed for wireless microphone systems. A unique design of a modular RF section allows quick frequency changes, yet preserves the high performance of an advanced fixed frequency design. The DR195 re-defines the state of the art in high end wireless microphone receivers.

The entire radio/audio system was designed from a "cold start," utilizing all that has been learned thus far. Many new types of IC's and semi-conductors are available now that were only ideas a few years ago. The DR195 design takes advantage of these new devices. The DR195 also takes advantage of recent changes in the FCC rules and regulations, allowing wider deviation, which improves the signal to noise ratio and frequency response of the system dramatically.

The 195 Series system was designed for the most critical studio and sound reinforcement applications. The system design represents a significant step forward in wireless microphone technology. Every stage in the entire audio/radio chain from transmitter input to receiver output was evaluated and analyzed to produce the operating parameters and perfor-

mance requirements for this entirely new design. The audio system provides the lowest distortion and best signal to noise ratio of any wireless mic system ever built. The RF link is extremely stable, providing the highest reliability and freedom from drop outs and interference.

MODULAR DESIGN

The DR195 receiver solves a key problem that has plagued wireless microphone systems since the first designs were completed. Most sound reinforcement companies, motion picture sound mixers, and other traveling users face the constant need for both highly reliable RF performance and very high quality audio, while moving from one city or location to another. Frequency coordination is a constant struggle in this application in order to work out frequency groupings for each new location. A frequency switchable receiver sounds, at first, like it would provide some benefit for this situation, but the poor RF performance of switchable designs creates more RF problems than it solves. The "modular" design of the DR195 receiver blends the RF performance of a fixed frequency design with the flexibility of a switchable design.



T195 TRANSMITTER

The T195 hand-held transmitter design was the result of considerable research. The RF and audio performance of the transmitter was considered first, followed by an analysis of the typical user's needs and the practicality of various design possibilities. The basic circuitry had to accommodate any frequency in the VHF or UHF spectrums. The mechanical design had to provide a comfortable "feel," yet be rugged, foolproof and easy to operate. The operating features and functions faced several contradictions in the needs of different types of users. This led to the development of a very versatile design wherein the transmitter can be configured for either "fool proof" operation or to provide user control of the audio level, metering and indicators. The final T195 design combines the benefits of superior performance, ruggedness, user convenience, and flexibility.

M195 TRANSMITTER

The M195 is a small belt-pack style transmitter which can be clipped on the belt, slipped into a pocket, or even taped to the user's body under clothing. It offers the same high performance and wide deviation as the T195 and is compatible with all of Lectrosonics' 195 series receivers. The M195 comes with a standard lavalier microphone but practically any mic can be adapted to work with this transmitter. The transmitter audio output can easily be monitored and set from the front panel.

DUAL-BAND COMPANDOR

Companders have long been a source of audible distortion in wireless microphone systems. The basic problem is that when the full bandwidth of the audio signal is processed by a single compandor, the attack and decay times will always be a compromise. If the time constants are fast, high frequency distortion will be low, however, faster time constants in the compandor create distortion of lower frequencies. If the time constants are slowed down, low frequency audio distortion will be low, but high frequency transients will then be distorted. The 195 system introduces a new approach to solving this basic problem with companders, called "dual-band companding."

There are actually two separate companders in the 195 system, one for high frequencies and one for low frequencies. A crossover network ahead of the compandor separates the frequency bands at 1kHz with a 6dB per octave slope, followed by separate high and low frequency companders. The attack and release times in the high frequency compandor are fast enough to keep high frequency distortion at an extremely low level. The low frequency compandor uses slower time constants, reducing low frequency distortion to well below that of a conventional compandor.

75KHz DEVIATION

75kHz of deviation improves the capture ratio, signal to noise ratio, and AM rejection of a wireless system dramatically.

NO PRE-EMPHASIS/DE-EMPHASIS

The signal to noise ratio of the 195 system is high enough to preclude the need for conventional pre-emphasis (HF boost) in the transmitter and de-emphasis (HF roll off) in the receiver. Pre-emphasis and de-emphasis in an FM radio system usually provides about a 10dB improvement in the signal to noise ratio of the system, but the high frequency boost in the transmitter must be removed in a purely complementary manner or else the frequency response of the original audio signal will be altered.

Pre-emphasis can also cause distortion in the IF filtering stage in the receiver, since the high frequencies have been boosted, which increases the level of the harmonics in the FM signal. As this signal is passed through the IF filters in the receiver, distortion will be produced, most noticeable at full modulation. De-emphasis cannot be applied until the signal is converted into audio, so there is no way around this problem short of eliminating pre-emphasis altogether. Neither of these problems occur in the 195 system. The dual-band compandor in the 195 Series system essentially provides a dynamic pre-emphasis/de-emphasis function with extremely low distortion.

EXCEPTIONAL THERMAL STABILITY

Thermal stability over a wide temperature range is a fundamental requirement for any wireless microphone system intended for professional use. Thermal drift is a major problem for some wireless systems that are highly recognized as "high-end" or "high-performance" products. These systems actually suffer from thermal drift problems that cause as much as a doubling or tripling of distortion and as much as 5dB fluctuations in audio output level as the temperature varies.

If temperature shifts cause the oscillators to drift, or values to change in the detector, serious distortion will result. The components in the 195 Series systems meet very stringent tolerances for thermal drift. System distortion in the 195 series remains at very low levels over a very wide temperature range. This is especially important in applications where the receiver and/or transmitter must be operated near heat generating devices, outdoors in direct sunlight, or with the receiver mounted in an equipment rack.

GENERAL TECHNICAL DESCRIPTION

The DR195 consists of two high performance, dual-conversion receivers operating simultaneously. The audio outputs of the receivers are blended in a ratio controlled by the compared signal to noise ratios of the receivers. The RF section is mounted on a separate circuit board, permitting frequency changes by simply interchanging the RF section assembly. The RF performance is extremely stable over a very wide temperature range, making the DR195 perfectly suited to mounting in studio equipment racks. The proprietary audio processing includes a dual-band compandor and dynamic noise filter for very low distortion and a superior signal to noise ratio. The squelch system is operated by a separate pilot tone and mutes the audio output directly at the output connector. The audio output is calibrated for exact level matching, with both peak LED and average VU indicators.

MODULAR UHF/VHF RF SECTION

A unique modular design is employed to simplify frequency changes. By simply interchanging the RF section module, the frequency can easily be changed without test equipment or soldering. All RF stages are contained in the removable RF section. The output of the RF section is audio, so changes to a new frequency, even from UHF to VHF, are simply a matter of changing out the RF module. This modular design provides the RF reliability of a fixed frequency design and the frequency flexibility of a switchable design.

As a side note, it is important to realize that frequency changes "on the fly" cannot be made on any type of wireless system. This is especially true in multi-channel applications where changing the frequency of one system could produce all kinds of new intermodulation problems with other systems operating in the same location. In reality, frequency changes can only be made on any wireless system during idle periods when the systems are not in use. For example, if there is a problem with a transmitter being used on stage that requires a frequency

change, the change cannot be made without interrupting the program or waiting until there is time between shows.

SIX-POLE HELICAL RESONATOR FRONT-END

The DR195 utilizes dual six-pole helical resonator front-end filtering, 3 pairs for each receiver. The helical resonators are much larger than those typically used for wireless microphone frequencies, producing an extremely high filtering "Q." The result is that the DR195 is not affected by high power signals close to the carrier, and offers extremely high image rejection.

GaAs FET FRONT-END FILTER COUPLING

The DR195 utilizes ultra low noise GaAs FET amplifiers in the front-end section to compensate for the required losses between filter stages. The GaAs FET devices are extremely quiet, especially at the higher frequencies in the UHF band.

DOUBLE BALANCED DIODE MIXERS

A double balanced diode mixer is used in the DR195 to produce the 10.7 MHz IF signal. The mixer produces output at only the sum and difference signals, with minimal spurious signals. This mixer offers a very high overload threshold and a high degree of isolation between ports.

8 POLE LINEAR PHASE FILTER

The 1st IF amplifier is a 4 stage amp with 2 poles of filtering after each stage. The filters are high quality, low distortion, constant group delay ceramic filters. This special type of filter is needed to accommodate the wide deviation of the 195 system.

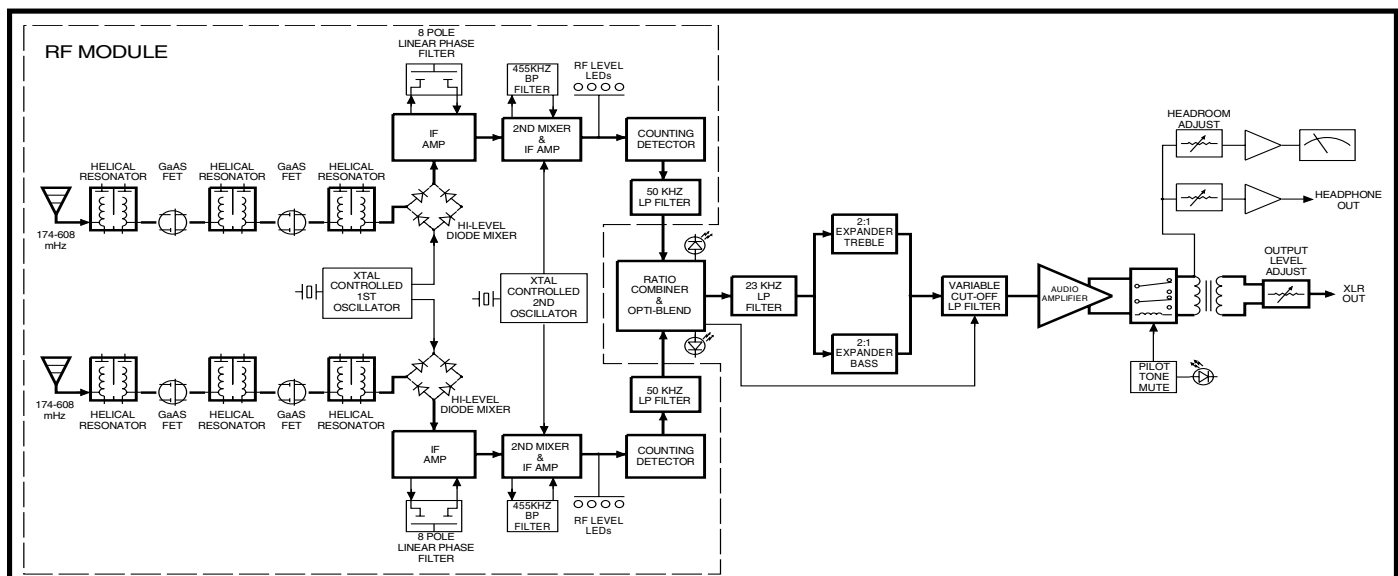


Figure 1 - DR195 Block Diagram

DIGITAL PULSE COUNTING DETECTOR

The DR195 receiver uses an advanced digital pulse detector to demodulate the FM signal, rather than a conventional quadrature detector. The most common problem with quadrature detectors is thermal drift, particularly those that operate at higher frequencies like 10.7 MHz. The DR195 design presents an elegantly simple, yet highly effective solution to this age old problem.

The DR195 detector basically works like this: A stream of DC pulses is generated at 455KHz. The pulse width is constant, but the timing between pulses varies with the frequency shift of the FM signal. The pulse stream is controlled by the FM signal coming from the IF section which has been heavily limited. The average voltage of the pulses within any given time interval varies in direct proportion to the frequency modulation of the radio signal, producing the audio signal.

This type of detector eliminates the traditional problems with quadrature detectors and provides very low audio distortion, high temperature stability and no thermal drift. The counting detector also adds additional AM rejection, in addition to the limiting in the IF section. The amplitude of the pulses is constant, so level differences in the IF signal do not affect the pulse.

RATIO COMBINING DIVERSITY WITH OPTI-BLEND

The audio outputs of the receivers are mixed together in a ratio controlled by the RF level of the received signal.

2:1 EXPANDER (Dual-Band Compressor)

This circuit is the other half of the dual-band compressor in a 195 system. “Dual-band Compressing” is a closed loop system, that is, whatever is done in the transmitter must be mirrored in the receiver. The transmitter compresses the audio signal in two separate audio bands using two separate time constants in order to avoid the inevitable trade-offs in a single-band compressor. The companion circuit in the receiver then re-expands this compressed signal restoring the original dynamic range and frequency characteristics of the signal.

The mixed audio signal leaves the Opti-Blend circuit and is fed through a 23 kHz Low Pass Filter where all the high frequency noise (including the 32 kHz pilot tone) is filtered out. After the 23 kHz low pass filter, the signal is split into two parts via a 1 kHz low pass filter and a 1 kHz high pass filter. The separated signals are then processed in separate channels of the NE575 2:1 Expander. Each channel of the 2:1 Expander is optimized for its respective frequency band. The two outputs of the 2:1 Expander are then summed in an op-

amp summer and sent to the Variable Cut-off Low Pass Filter as one signal.

VARIABLE CUTOFF LOW PASS FILTER

After being processed in the 2:1 expander, the audio signal is passed through a “dynamic noise reduction circuit”. The cutoff frequency of this filter is varied automatically by sampling the audio signal. The audio bandwidth is held only to that point necessary to pass the highest frequency audio signal present at the time. This results in a dramatic reduction of “hiss” during pauses in voice or music content. During passages with a large high frequency content, this filter gets completely “out of the way” and passes the signal with no decrease in high-frequency response.

PILOT TONE MUTE (SQUELCH)

The 195 system utilizes a separate ultrasonic tone modulation of the basic carrier to operate the receiver squelch. In the transmitter, a 32kHz tone is injected into the audio signal after the microphone preamp, just after the compressor. The supersonic pilot tone is filtered out of the audio signal immediately after the detector in the receiver so that it does not influence the compressor or various gain stages.

The basic benefit of the pilot tone squelch system is that the receiver will remain squelched (muted) until it receives the pilot tone from the matching transmitter, even if a strong RF signal is present on the carrier frequency of the system. Once a pilot tone is received, the receiver will remain open during all signal conditions. If the transmitter signal degrades to the point where hiss and noise may become objectionable, the Opti-Blend and Variable Cutoff Low Pass Filter will work to reduce the unwanted noise to an unnoticeable level. Since the pilot tone is still keeping the receiver open, as soon as the transmitter signal returns to normal, the audio signal is instantly available with no delays.

The mute circuit drives a relay which physically disconnects the output amplifier from the output audio transformer. The relay then connects the transformer primary to ground to prevent hum pickup in the transformer due to an open primary winding. This provides complete muting of the audio and the noise. The pilot tone function may be bypassed with a rear panel push button. Once pushed, the pilot tone mute is “latched” in a disabled condition until the receiver is powered off then back on. When the pilot tone is disabled, there is still a “squelching” function provided by the Opti-Blend and Variable Cutoff Low Pass Filter. These circuits can provide approximately 50 dB of muting during weak or no signal conditions when the pilot tone is disabled.

FRONT PANEL CONTROLS AND FUNCTIONS

AUDIO OUTPUT LEVEL

A high quality VU meter is used to monitor the audio output level, providing an accurate indication of the average audio output level. The VU meter sensitivity is adjusted with a rear panel control to compensate for the difference in transient response rise time between the VU meter and the LED strip below the meter. Depending upon the dynamic characteristics of the audio source, it may be necessary to adjust for headroom in the VU meter.

If the signal peaks exceed full modulation, distortion or audible compression could occur. In the past, it was common practice with other designs to adjust the VU meter sensitivity to allow headroom, compensating for the slow rise time of the VU meter. These older designs did not have peak reading indicators, therefore, by the time the VU meter indicated 0dB, the actual peak level was far above full modulation. The DR195 output and VU meter headroom controls provide an absolute level reference and calibrated sensitivity adjustments.

TRANSMITTER AUDIO LEVEL

The modulation (audio level) of the incoming signal is indicated by a fast responding LED strip. The strip is calibrated in 6dB steps over an expanded scale (54dB) which provides an extremely accurate visual “picture” of the signal dynamics, even at a distance away from the receiver. Audio signal peaks easily exceed the response time of VU meters, however, the LED strip is fast enough to track even brief transients. The combination of the LED strip and the conventional VU meter provides a complete and accurate visual monitoring of signal levels and dynamic range.

RF LEVEL INDICATORS

Two separate LED strips are provided to indicate the level of the incoming RF signals. The LED strips are calibrated to provide accurate indications from 1uV to 1mV. The LEDs are highly visible from a distance, making antenna set up more accurate. The dual LED strips are especially useful in “trouble-shooting” difficult antenna installations.

OPTI-BLEND LEDs

The DR195 receiver operates with a method of audio ratio blending of two audio outputs. RF level in each receiver is compared and the audio signals from the two receivers are mixed together in a ratio that favors the quieter receiver. As this blending action occurs, the brightness of the two OPTI-BLEND LEDs will vary. The brighter the LED, the more audio is being mixed in from that receiver.

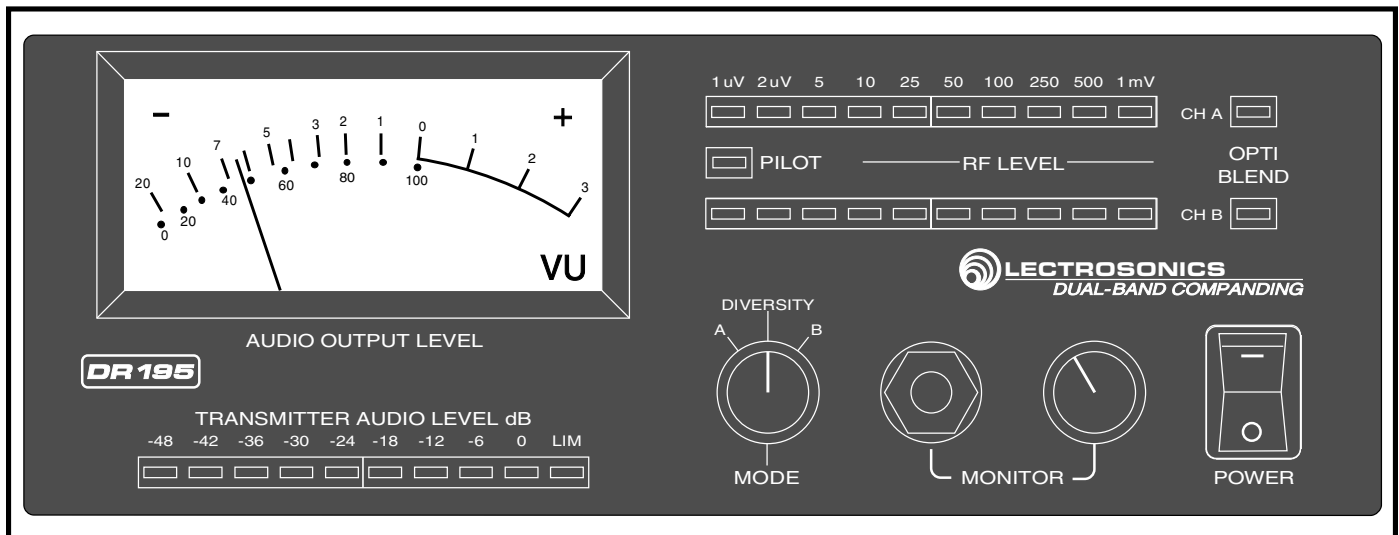


Figure 2 - DR195 Front Panel

PILOT LED

The audio output muting (squelch) function of the DR195 is controlled by a 33kHz tone modulation of the RF carrier. The audio output is muted until this tone is present. As soon as the tone is received, this LED is turned on to indicate the audio output is enabled.

The pilot tone function can be defeated by pressing a switch on the rear panel. The PILOT LED, however, operates the same regardless of whether or not the defeat switch is pressed. The PILOT LED strictly indicates the presence of the pilot tone carrier from the transmitter.

DIVERSITY MODE

This switch is set to the DIVERSITY position for normal operation. For trouble-shooting or when the receiver is used with a single antenna, the switch can be set to select a single antenna only.

MONITOR

This is an audio output to drive a wide variety of different types of headphones. It is also useable as a secondary audio output to drive recorders or external audio devices.

POWER

Pressing the upper half of the rocker switch applies power to the receiver. At turn on, there are various relays and delays built into the receiver to allow various stages to stabilize before the audio output is activated. This will prevent an audio “thump” when powering up the receiver and/or the transmitter.

REAR PANEL CONTROLS AND FUNCTIONS

VU METER HEADROOM

Since VU meters are too slow to respond to brief transients in audio signals, they do not indicate “peaks” in the audio signal, however, they do indicate the average levels of the audio signal in the 20dB range below maximum level. A calibrated sensitivity control is provided on the DR195 rear panel to allow the VU meter sensitivity to be increased so that it will more closely track the modulation level LED strip with different kinds of program material.

AUDIO OUTPUT

A calibrated control on the rear panel adjusts the output level in 5 dB steps, referenced in dBu. This control knob adjusts the absolute output level at the XLR connector when the VU meter indicates “0” so that an exact level can be reliably achieved. The 5dB increment on the output level control matches the 5dB increment on the VU meter headroom control so it is easy to determine the true output level. For example, with the VU meter headroom control set for 10dB, the actual audio output level will be *10dB lower than the VU meter indicates. Setting the output level control 10dB higher will compensate for the additional sensitivity of the VU meter. The Audio Output level control is located after the output transformer. This allows the signal to noise ratio to remain constant regardless of the setting of the control. As the audio level is reduced, the noise is also reduced maintaining the same ratio.

PHASE REV

This locking toggle switch reverses the polarity of the audio output signal.

AC POWER SUPPLIES

The DR195 can be powered from conventional 110 or 220 Volt AC supplies via an internationally approved connector. A standard grounded socket, fuseholder and voltage selector switch are combined into a single assembly. The fuseholder also contains a spare fuse. To remove the fuseholder, simply pry it out with a screwdriver or similar tool (it pulls straight outward from the assembly). To select the operating voltage, disconnect the AC power and then turn the voltage selector (located to the left of the fuse) using a flatblade screwdriver or other similar tool so that the desired voltage is lined up with the mark at the top.

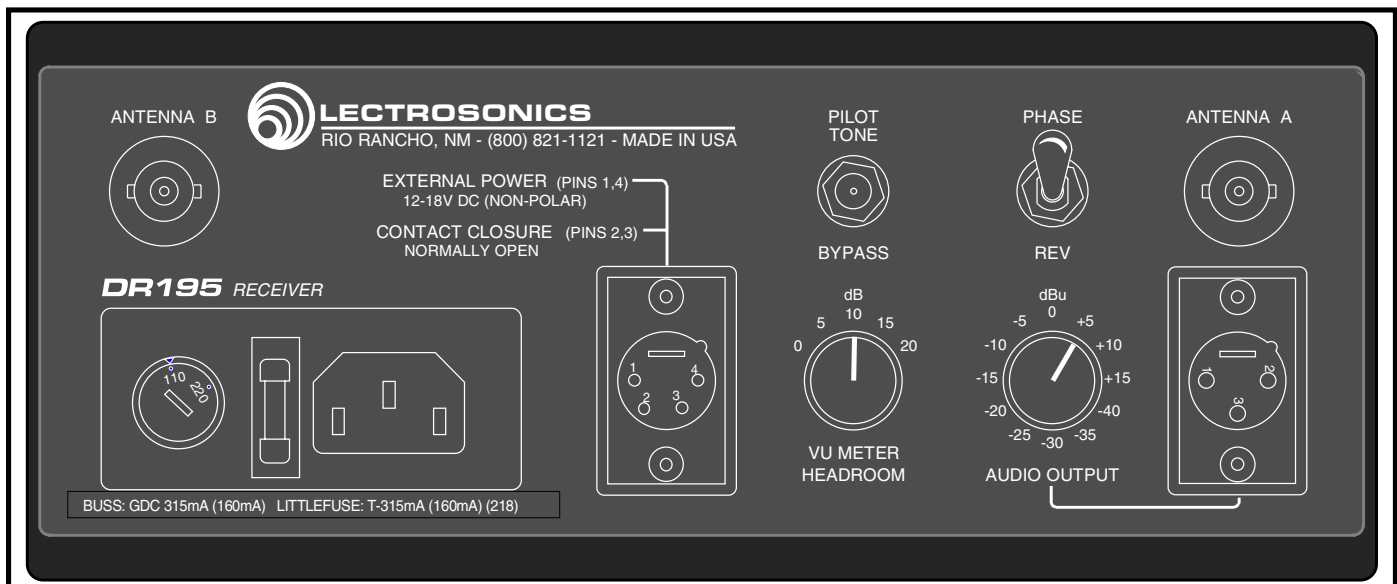


Figure 3 - DR195 Rear Panel

EXTERNAL POWER JACK

The DR195 can be powered from external 12 to 18 Volt DC sources via the four pin XLR jack. The jack is non-polarized between pins 1 and 4. Internal relays correct the polarity automatically if reverse polarity is connected. By using relays to correct the power supply polarity, there is no voltage drop, as would occur in a diode bridge circuit. The relays and power supply stage are fully protected by automatic reset poly fuses. The ground side of the power supply is protected with a self resetting poly fuse in case the DR195 is connected to a positive ground device through the audio cabling. The poly fuse will trip to protect the receiver and the offending ground path can then be removed.

CONTACT CLOSURE

This switch is used to activate an external device, such as a tape recorder or an external relay. The switch is keyed to the pilot tone squelch function of the receiver. When the squelch opens, a contact closure (or opening) is activated at this connector.

Pins 2 and 3 of the four pin XLR connector can be configured for “normally open” or “normally closed” operation. The unit is shipped from the factory in the “normally open” position, which means that there is a short between pins 2 and 3 of the four pin XLR when there is a pilot tone present.

The PILOT TONE BYPASS switch defeats the action of the relay. With the pilot tone bypassed, the relay will remain shorted until the power to the receiver is turned off, regardless of the presence of a pilot tone carrier. To return to pilot tone use, switch the receiver power completely off then back on.

PILOT TONE BYPASS

This switch defeats the audio output muting and triggering action of the pilot tone. When the pilot tone is bypassed, the Opti-Blend and the Variable Cutoff Low Pass Filter will still provide a squelching action during weak signal conditions. These circuits will provide approximately 50 dB of muting when the pilot tone is bypassed.

ANTENNA JACKS

These are standard 50 Ohm BNC terminals for the RF input to the receiver.

ANTENNA USE AND PLACEMENT

There are two remote antenna assemblies included with this receiver. Position the antennas at least three or four feet apart at VHF frequencies and so that they are not within 3 or 4 feet of large metal surfaces. If this is not possible, try to position the antennas so that they are as far away from the metal surface as is practical. It is also good to position the receiver so that there is a direct “line of sight” between the transmitter and the receiver antenna. In situations where the operating range is less than about 50 feet, the antenna positioning is much less critical. The antennas can also be configured with one whip mounted directly onto the rear panel of the DR195 receiver, and the other one mounted remotely.

A wireless transmitter sends a radio signal out in all directions. This signal will often bounce off nearby walls, ceilings, etc. and a strong reflection can arrive at the receiver antenna along with the direct signal. If the direct and reflected signals are out of phase with each other a cancellation may occur. The result would be a “drop-out.” A drop-out sounds like either audible noise (hiss), or in severe cases, may result in a complete loss of the carrier and the sound when the transmitter is positioned in certain locations in the room. A drop-out normally sounds like “hiss” or a “swishing” sound. Moving the transmitter even a few inches will change the sound of the hum or hiss, or eliminate it. A drop-out situation may be either better or worse as the crowd fills and/or leaves the room, or when the transmitter or receiver is operated in a different location.

The DR195 receiver offers a sophisticated diversity design which overcomes drop-out problems in almost any imaginable situation. In the event, however, that you do encounter a dropout problem, first try moving the antenna at least 3 or 4 feet from where it was. This may alleviate the drop-out problem on that antenna. If drop-outs are still a problem, try moving the antenna to an entirely different location in the room or moving the antennas in closer to the transmitter location. By observing the OPTI-BLEND LEDs on the front panel, you can determine which antenna is suffering weak signals.

Lectrosonics transmitters radiate power very efficiently, and the receivers are very sensitive. This reduces drop-outs to an insignificant level. If, however, you do encounter drop-outs frequently, call the factory or consult your dealer. There is probably a simple solution.

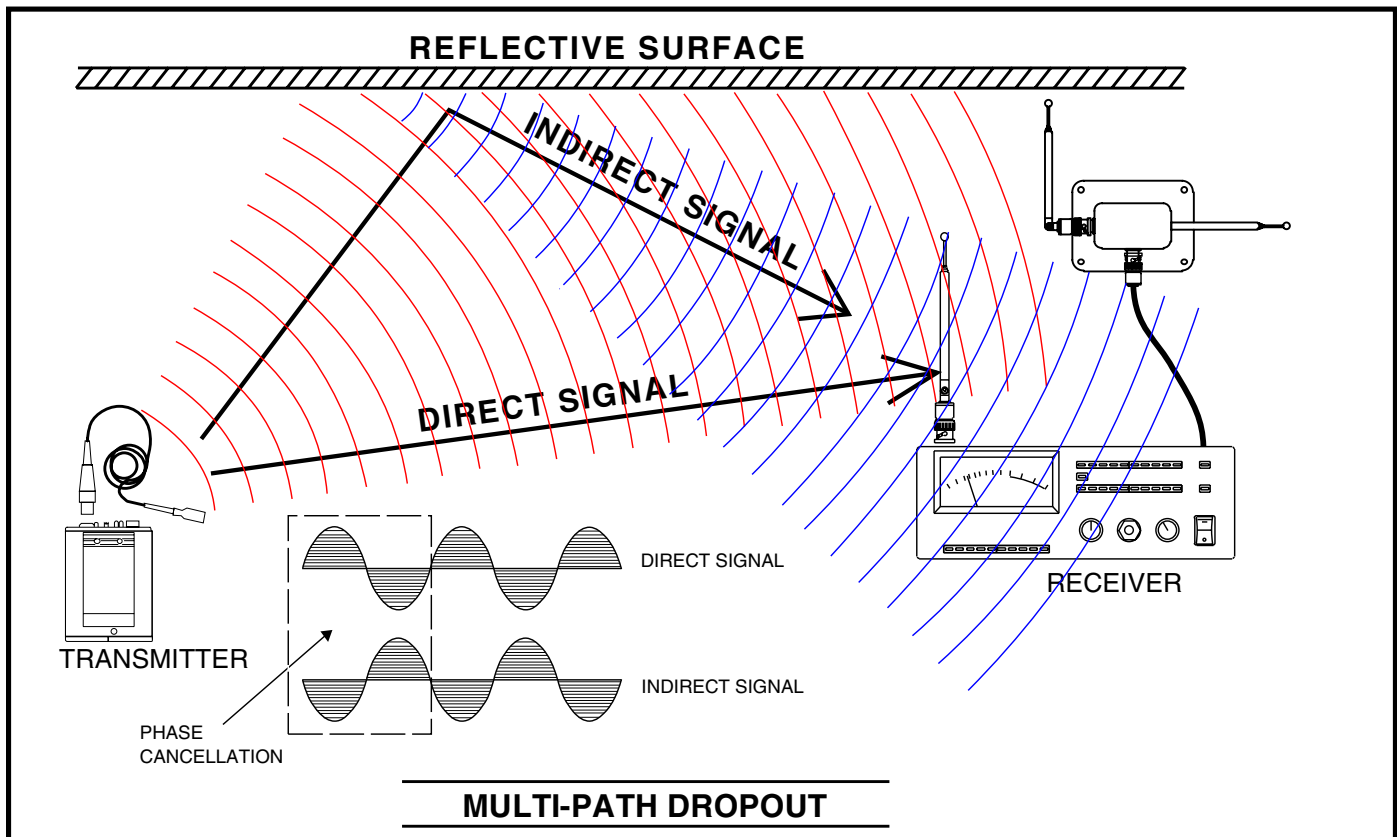


Figure 4 - Drop-outs

INSTALLATION AND OPERATING INSTRUCTIONS

- 1) If operating the unit from AC power, determine the line voltage to be used and set the Line Voltage Selector on the rear panel to match. The units are shipped with the proper size fuse for use with 120V systems (315mA). If the unit will be used in a 220V environment, change the fuse to a 160mA of the same type. See the section "DR195 Replacement Parts and Accessories" for manufacturer part numbers of the correct type and value for 110 and 220 Volt supplies.
- 2) Locate a suitable operating location where the DR195 will not be subjected to extreme temperature variations and possible bumps and drops. Try to route all wiring so it will not cross walkways or isles.
- 3) Connect the power. For 120V AC operation, connect the power cord to the AC input jack on the rear panel and plug the other end into a suitable electrical outlet. If 12 to 18 Volts DC operation is desired, a power cord will need to be fabricated. Use a standard A4M XLR connector for the DR195 end and wire the 12 to 18 VDC to pins 1 and 4. The DR195 will operate with either polarity. Make the length of the DC cable long enough to suit your installation and prepare and connect the source end of the cable.
- 4) Attach the antenna cables to the BNC jacks on the rear of the DR195 and place the antennas. Best performance will be obtained if the antennas are placed at least 3 feet from each other. Try to mount them as high as possible with a direct line of sight path to the transmitter.
- 5) Set the Audio Output level control to minimum (CCW) and connect the Audio Output XLR jack to the mixer input. Pins 2 and 3 of the XLR jack are HI and LO and can be reversed with the Phase switch, pin 1 is common.
- 6) Preset the following controls:
 - MODE (front panel) to DIVERSITY
 - MONITOR (front panel) to minimum (CCW)
 - PHASE (rear panel) to UP
 - VU METER HEADROOM (rear panel) to 0
 - AUDIO OUTPUT (rear panel) to -40 (full CCW)
- 7) Turn the unit on with the front panel Power switch and check to see that the red Pilot LED is off (be sure the transmitter is turned off.) The VU meter will be lit only when the unit is operated from 120 VAC.
- 8) Turn on the transmitter and adjust the transmitter gain. **THIS IS PERHAPS THE MOST IMPORTANT STEP IN THE SET UP PROCEDURE.** Adjust the transmitter so that voice peaks will light the 0 LED on the DR195 front panel Transmitter Audio Level dB strip. The red LIM LED may flash occasionally. This is normal but it should not happen very often. See your transmitter manual (Operating Instructions section) for specific directions on how to adjust the gain of your particular transmitter.
- 9) After adjusting the transmitter gain, set the rear panel Audio Output level control to the desired level. The -40 setting is approximately equal to 10mV, the 0 position will give 0.775VRMS, and the +15 setting will allow up to 4.4 VRMS. This setting will depend on the requirements of your system.
- 10) Operate the system and re-adjust the receiver output level as required for your equipment. The input levels on different VCR's and PA equipment vary, which may require that you set the OUTPUT ATTENUATOR control in an intermediate position. Try different settings and listen to the results. If the output of the receiver is too high, you may hear distortion or a loss of the natural dynamics of the audio signal. If the output is too low, you may hear steady noise (hiss) along with the audio.
- 11) Once the transmitter and Audio Output level has been set, you may adjust the VU Meter Headroom on the rear panel so the analog VU meter will swing to 0 on normal audio peaks. The Headroom control is calibrated 0 to 20 dB in 5 dB steps so it is always possible to know what the VU meter is actually measuring. For instance, if the VU meter is indicating 0 with a steady state audio tone and the Headroom control is set to "5", the audio output is -5 dBu. The Headroom switch actually adjusts the sensitivity of the VU meter by a calibrated amount. Without it, the VU meter would not deflect at all if the Audio Output was set to a low setting such as -30.

TROUBLESHOOTING

POWER SUPPLY AND FUSE

VU meter lamp and LEDs not lit or dimly lit — When the DR195 is powered from an external DC supply, the VU meter lamp stays out and the LEDs are dimmed to conserve battery life.

AC power cord disconnected.

External power supply disconnected or inadequate.

Main power supply fuse blown.

For 110 Volt operation: 315 mA, 250 Volt

Buss GDC-315 or Littlefuse 218.315 (Lectrosonics part #22090)

For 220 Volt operation: 160mA, 250 Volt

Buss GDC-160 or Littlefuse 218.160 (Lectrosonics part #22091)

Rear panel voltage selector incorrectly set.

PILOT TONE SQUELCH

The PILOT indicator lamp on the front panel lights up to indicate that the audio has been turned on at the transmitter, and that the audio output on the receiver is enabled. When the lamp is on, the audio is on. When the lamp is off, the audio is muted.

PILOT lamp on, but no sound

Audio output cable bad or disconnected. Try monitoring at the headphone output on the front panel. The headphone output signal is taken just ahead of the output transformer.

AUDIO OUTPUT level set too low.

PILOT lamp off, but sound still comes through

PILOT TONE BYPASS switch may have been pressed. Turn DR195 power off and then back on again to reset the audio output relays.

PILOT lamp does not come on when transmitter audio switch is turned on

It takes several seconds for the relay to actuate the PILOT lamp. Turn the transmitter power and audio switches on and wait 5 to 10 seconds for the lamp to come on.

ANTENNAS AND RF SIGNAL STRENGTH

RF LEVEL is weak on one (or both) channels

Antenna is disconnected or there is a bad connection

Antenna may need to be moved or re-oriented

Improper length of antenna, or wrong antenna. UHF whip antennas should be about 5 to 6 inches long. VHF whip antennas: should be about 14 to 20 inches long.

One OPTI BLEND LED does not come on or is dimly lit

DIVERSITY switch is set to one or the other channels. Needs to be in the center position for normal operation.

Reverse the antennas on the rear panel inputs. If the opposite OPTI BLEND LED now indicates the same problem, there may be an antenna or cabling problem. Try re-positioning the antenna(s).

AUDIO SIGNAL QUALITY

Poor signal to noise ratio

Transmitter gain set too low

Noise may not be in wireless system. Mute the audio signal at the transmitter and see if noise remains. If the noise remains, then turn the power off at the transmitter and see if it remains. If the noise is still present, then the problem is not in the transmitter.

If noise is still present when the transmitter is turned off, try lowering the audio output level on the DR195 rear panel and see if the noise lowers correspondingly. If the noise remains, the problem is not in the receiver.

Receiver output does not match the input of the device it is feeding. Try increasing the output level of the DR195 and lowering the input gain on the device the DR195 is feeding.

Distortion

Transmitter input gain too high. Check and/or re-adjust input gain on transmitter according to the LEDs on the transmitter and then verify the setting with the transmitter audio level LED strip on the DR195 front panel.

Audio output level too high for the device the DR195 is feeding.

Compressed dynamic range

VU METERING AND OUTPUT LEVEL

The TRANSMITTER AUDIO LEVEL LED strip provides an expanded scale range and virtually an instantaneous response to brief transients in the signal. The VU meter range is much more limited, and slower responding to brief transients.

VU meter barely moves, even when the AUDIO LEVEL LED strip shows full modulation

Depending upon the nature of the dynamics in the audio signal passing through the system, you may need to increase the sensitivity on the VU meter. Adjust the VU meter sensitivity with the rear panel VU METER HEADROOM control on the rear panel so that the LED strip and VU meter appear to track signal peaks about the same.

VU meter indicates a higher level than the AUDIO LEVEL LED strip.

The VU METER HEADROOM control may be set too high for the dynamics of the audio signal.

NOTE: When adjusting the VU METER HEADROOM control to increase the VU meter readings, it may be desirable to also adjust the AUDIO OUTPUT control to compensate for the added sensitivity of the VU meter. Both controls are calibrated in 5 dB steps. Increase the AUDIO OUTPUT by the same amount as is set on the VU METER HEADROOM control to insure that the desired output level will be present at 0 on the VU meter.

DR195 REPLACEMENT PARTS and ACCESSORIES

<u>Part No.</u>	<u>Description</u>
A-185 Coax	Remote, coaxial folded dipole VHF antenna; BNC connector
A-185-BNC	Telescoping 1/4 wave VHF/UHF whip; BNC connector.
A-200	Remote dipole UHF/VHF antenna with aluminum mounting block; supplied with one built-in telescoping whip and one detachable telescoping whip. Operates on VHF or UHF frequencies.
A-9775	Coaxial extension cable for A-200 dipole antenna; BNC male/male connectors, 10 ft, RG-58 cable.
21475	Replacement power cord
22090	Replacement fuse, GDC, 315ma, 250V
22091	Replacement fuse, GDC, 160mA, 250V

SPECIFICATIONS AND FEATURES

Receiver

Operating Frequencies: 470 to 608 MHz, crystal controlled

Receiver Type: Dual conversion, superheterodyne

Frequency Stability: $\pm 0.002\%$

Front end selectivity: >70 dB at ± 4 MHz

IF Selectivity: >90 dB at ± 300 kHz (10.7 IF)

IF Frequency: 10.7 MHz (1st IF); 455 kHz (2nd IF)

IF bandwidth: 150 kHz at $\frac{1}{2}$ power points

Sensitivity

20 dB Sinad: 0.56 μ V (-113 dBm), A weighted

60 dB Quieting: 1.0 μ V (-112 dBm), A weighted

Squelch quieting: Greater than 125 dB

AM rejection: Greater than 60 dB, 2 μ V to 1 Volt
(Undetectable after processing)

Modulation acceptance: ± 75 kHz

Image and spurious

rejection: > 120 dB

Third order intercept: -10 dBm

Diversity technique: Ratio diversity. Dual simultaneous receivers with dynamic audio combining (Opti-blend).

FM Detector: Digital Pulse Counting Detector

Antenna inputs: Dual BNC female;
50 Ohm impedance

Audio outputs

Rear Panel XLR: 600 Ohm Balanced, transformer isolated, adjustable from 10 mV to 4.4 Volts RMS in 12 steps, at 60 kHz deviation

Monitor out: Front panel $\frac{1}{4}$ " Phone jack, adjustable from 0 to 600 mV RMS into 8 Ohms at 60 kHz deviation

Front Panel Controls and

Indicators: Power on/off switch and LED; Dual 10 segment RF signal level display; 10 segment transmitter audio level display; diversity operation selector switch; Opti-Blend operation LEDs; Pilot tone indicator; Monitor output jack and level control;

Rear Panel Controls and

features: Antenna A and Antenna B BNC connectors; Pilot tone bypass switch; Audio phase reversal switch; VU meter headroom control; XLR audio output jack and 12-step audio attenuator; External 12VDC input and contact closure output jack; 120/240 VAC input jack with integral voltage selector switch and fuse.

Power Options: 120/240 VAC, 50/60 Hz, 10 Watts
12V DC, 7 Watts (560 ma)

Weight: 8 lbs, 11 ozs

Dimensions: 8 $\frac{1}{2}$ " wide x 3 $\frac{1}{2}$ " high x 13" deep
(With handles and power cord)

System (DR195 receiver with T195 transmitter)

Audio Processor: Dual-band compandor with variable cut-off frequency low-pass filter

Total Harmonic Distortion

1 kHz: $< 0.45\%$

30 Hz to 20 kHz: $< 1\%$ (30 kHz deviation)

Signal/Noise ratio: 109 dB, full quieting, A weighted
60 dB, A-weighted, at .63 μ V
(-111 dBm) signal input

Frequency Response: ± 1 dB, 30 Hz to 21 kHz,
400 Hz reference, 30 kHz deviation

SERVICE AND REPAIR

If your system malfunctions, you should attempt to correct or isolate the trouble before concluding that the equipment needs repair. Make sure you have followed the setup procedure and operating instructions. Check out the inter-connecting cords and then go through the TROUBLE SHOOTING section in the manual

We strongly recommend that you **do not** try to repair the equipment yourself and **do not** have the local repair shop attempt anything other than the simplest repair. If the repair is more complicated than a broken wire or loose connection, send the unit to the factory for repair and service. Don't attempt to adjust any controls inside the units. Once set at the factory, the various controls and trimmers do not drift with age or vibration and never require readjustment. **There are no adjustments inside that will make a malfunctioning unit start working.**

LECTROSONICS service department is equipped and staffed to quickly repair your equipment. In-warranty repairs are made at no charge in accordance with the terms of the warranty. Out of warranty repairs are charged at a modest flat rate plus parts and shipping. Since it takes almost as much time and effort to determine what is wrong as it does to make the repair, there is a charge for an exact quotation. We will be happy to quote approximate charges by phone for out of warranty repairs.

RETURNING UNITS FOR REPAIR

You will save yourself time and trouble if you will follow the steps below:

- A. DO NOT return equipment to the factory for repair without first contacting us by letter or by phone. We need to know the nature of the problem, the model number and the serial number of the equipment. We also need a phone number where you can be reached 8 am to 4 pm (Mountain Standard Time).
- B. After receiving your request, we will issue you a return authorization number (R.A.). This number will help speed your repair through our receiving and repair departments. The return authorization number must be clearly shown on the outside of the shipping container.
- C. Pack the equipment carefully and ship to us, shipping costs prepaid. If necessary, we can provide you with the proper packing materials. UPS is usually the best way to ship the units. Heavy units should be "double-boxed" for safe transport.
- D. We also strongly recommend that you insure the equipment, since we cannot be responsible for loss of or damage to equipment that you ship. Of course, we insure the equipment when we ship it back to you.

Mailing address:

Lectrosonics, Inc.
PO Box 15900
Rio Rancho, NM 87174
USA

Shipping address:

Lectrosonics, Inc.
581 Laser Rd.
Rio Rancho, NM 87124
USA

Phones:

505-892-4501
800-821-1121
505-892-6243 Fax

Web: <http://www.lectrosonics.com>

email: sales@lectrosonics.com



LIMITED ONE YEAR WARRANTY

The equipment is warranted for one year from date of purchase against defects in materials or workmanship provided it was purchased from an authorized dealer. This warranty does not cover equipment which has been abused or damaged by careless handling or shipping. This warranty does not apply to used or demonstrator equipment.

Should any defect develop, we will, at our option, repair or replace any defective parts without charge for either parts or labor. If we cannot correct the defect in your equipment, we will replace it at no charge with a similar new item. We will pay for the cost of returning your merchandise to you.

This warranty applies only to items returned to us, shipping costs prepaid, within one year from the date of purchase.

This warranty gives you specific legal rights. You may have additional legal rights which vary from state to state.

LECTROSONICS, INC.

581 LASER ROAD
RIO RANCHO, NM 87124 USA

July 6, 1999